

# TO Tucker's SG Outdoor Sculpture Gallery

## Installation Guide

*New adapter plates are available to mount your sculpture onto the old Tucker's Gallery pedestal frames. However, if the hole pattern on your sculpture fits the old framework, you are not required to use the adapter plates. See Page 3 for a diagram of the original bolt pattern.*

### Adapter Plate Information

*Please let Arts Council staff know if you do not have a drill capable of drilling through 1/2" steel plate.*

- The steel adapter plates measure 21" x 24" x 1/2".
- Each plate has holes in the 4 corners that are to be used **ONLY** for anchoring the plate to the original framework using the locking washers and nuts supplied by the Arts Council.
- Drilling will be done at your pedestal, so come prepared to bore mounting holes directly into the the top adapter plate that will align with your sculpture.
- As long as your mounting holes do not interfere with the 4 anchors, you are free to drill anywhere on the plate.
- ***You must supply your own nuts and bolts to attach your work to the adapter plate. a minimum of 1/2" diameter bolts are required, and bringing extra washers is suggested.***
- Work must be secure and pass inspection by the City of Lenoir before you leave after installation is complete.
- *See the page 2 for photos and specific instructions, and page 3 for the original bolt diagram.*



Caldwell Arts Council  
P.O. Box 1613 • 601 College Ave. SW  
Lenoir, NC 28645  
[www.caldwellarts.com](http://www.caldwellarts.com)  
[office@caldwellarts.com](mailto:office@caldwellarts.com)

## Tucker's Gallery Sculpture Installation Instructions

1. The adapter plate is pre-drilled with holes in each corner and is marked RST, which stands for "Road Side Top". To properly align it with the anchor bolts, you MUST install the plate with RST face up and the initials facing the street.



2. It is recommended that you place the adapter plate onto the pedestal, feeding the anchor bolts through the corners to mark where your work's bore holes will be located. Do not secure the plate to the base with nuts at this point.

3. Drill your sculpture's mounting holes in the top plate only. DO NOT bore through the base plate underneath.



4. Once holes are drilled and scrap steel is cleaned up, remove the adapter plate from the anchors and feed your mounting bolts thread side up. This means that the nuts will be threaded from the top.



5. Reinstall the adapter plate with your threaded bolts in place.

6. Using the locking washers and nuts supplied by the Arts Council, firmly tighten the anchor bolts for the final attachment of the adapter plate to the pedestal.

7. Securely install the sculpture using your mounting bolts and washers. There will be approximately 5/8" between plates to allow for a wrench to be used for tightening down your sculpture.


*Caldwell Arts Council staff will assist you if you have any questions or concerns about installing sculpture in Tucker's Gallery, please contact Ellen Ball at 828-754-2486.*



# Original Tucker's Gallery Sculpture Bolt Hole Placement Diagram

## Steel Base Plate

Plate is 21" x 24" with the short side facing the street. All 9 holes are 3/4" in diameter.

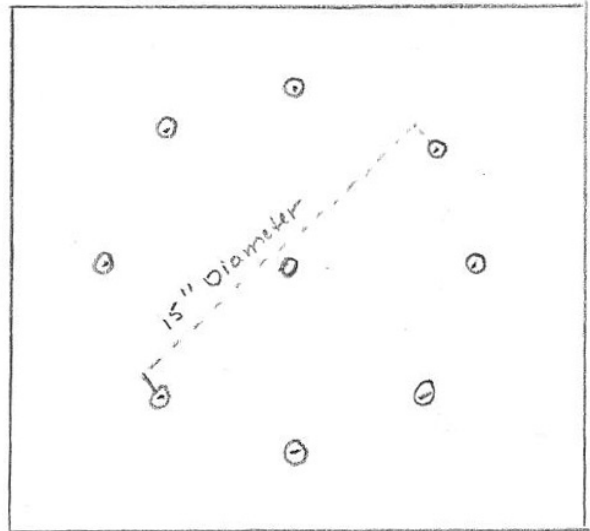

## *Installation Examples*

